0 24847 60687 4

FORM MS-3580-02/21/2011
REPLACES FORM MS-3580-09/16/2010
FILE IN SECT. 2 OF SERVICE MANUAL

Illustrated Parts List

Model Series

44L700

TYPE NUMBERS
0025 through 3137

TABLE OF CONTENTS

Air Cleaner 6
Alternator 8
Blower Housing/Shrouds 6
Camshaft 2
Carburetor 5
Controls 7
Crankshaft 2
Cylinder 2
Cylinder Head 4
Electric Starter 9
Engine Sump 3
Exhaust System 5
Flywheel 7
Fuel Supply 5
Ignition 8
Gasket Set - Engine 2
Gasket Set - Valve 4
Kit-Carburetor Overhaul 5
Lubrication 3
Piston, Rings, Connecting Rod 2
Valves 4

Not for Reproduction

PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

44L700

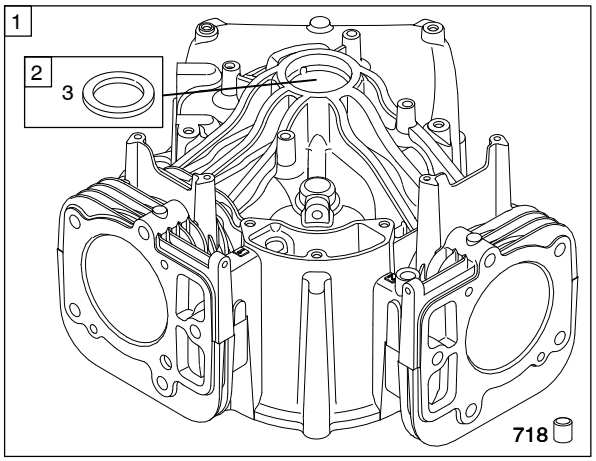

1319 WARNING LABEL	1058 OPERATOR'S MANUAL
***REQUIRED** when replacing parts with warning labels affixed.*	1330 REPAIR MANUAL

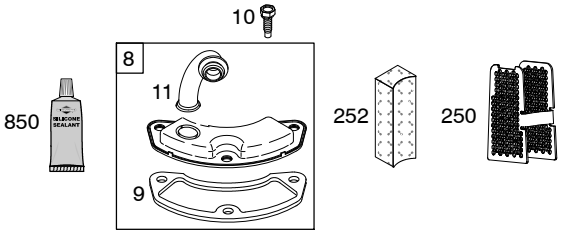

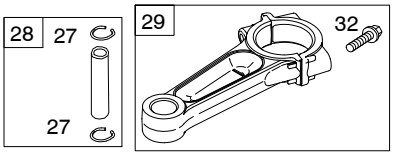

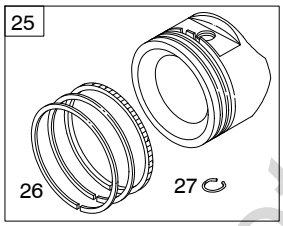

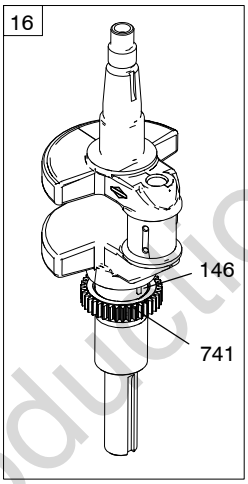

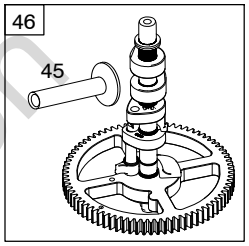

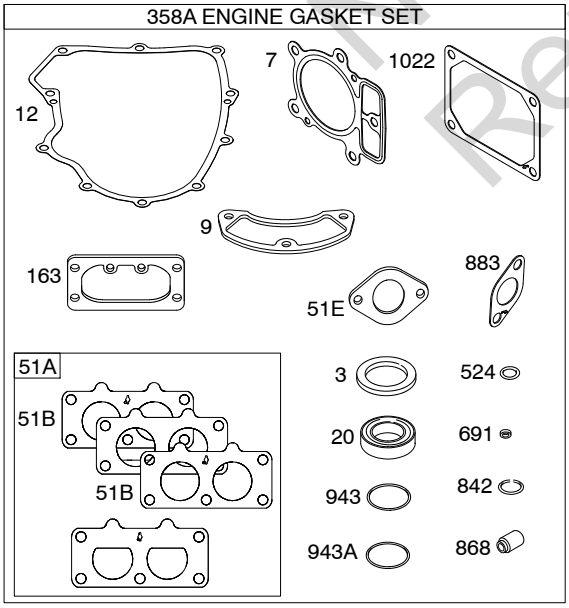

Not for Reproduction

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

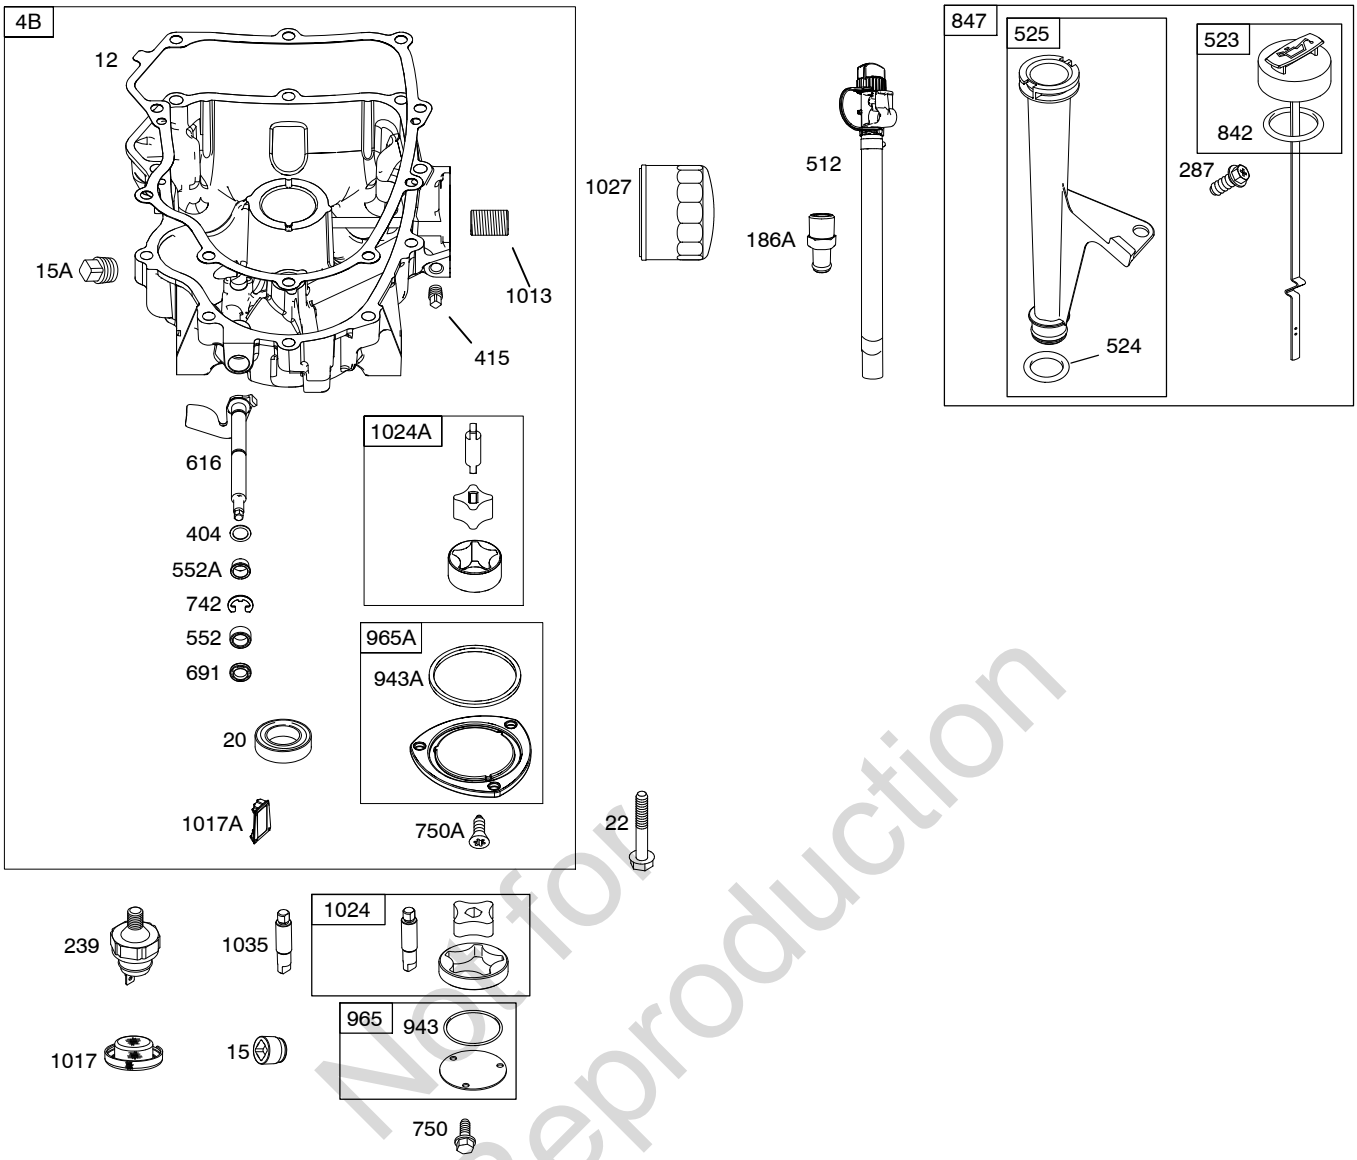

Not for Reproduction

44L700

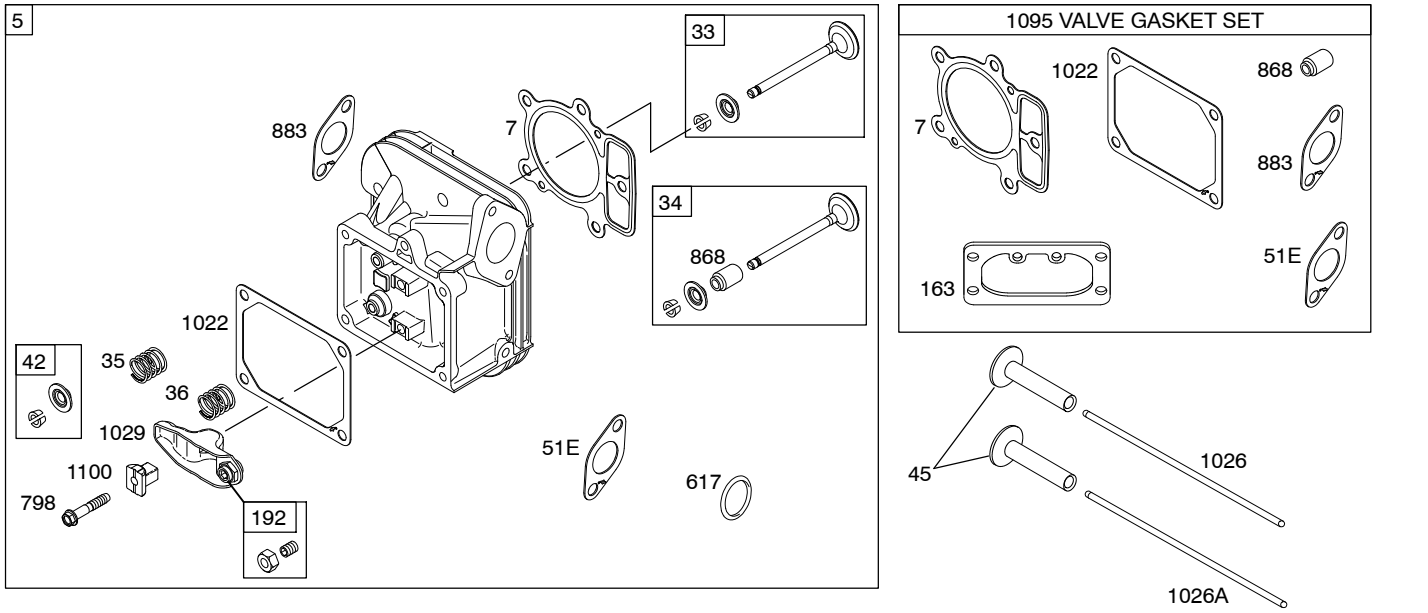

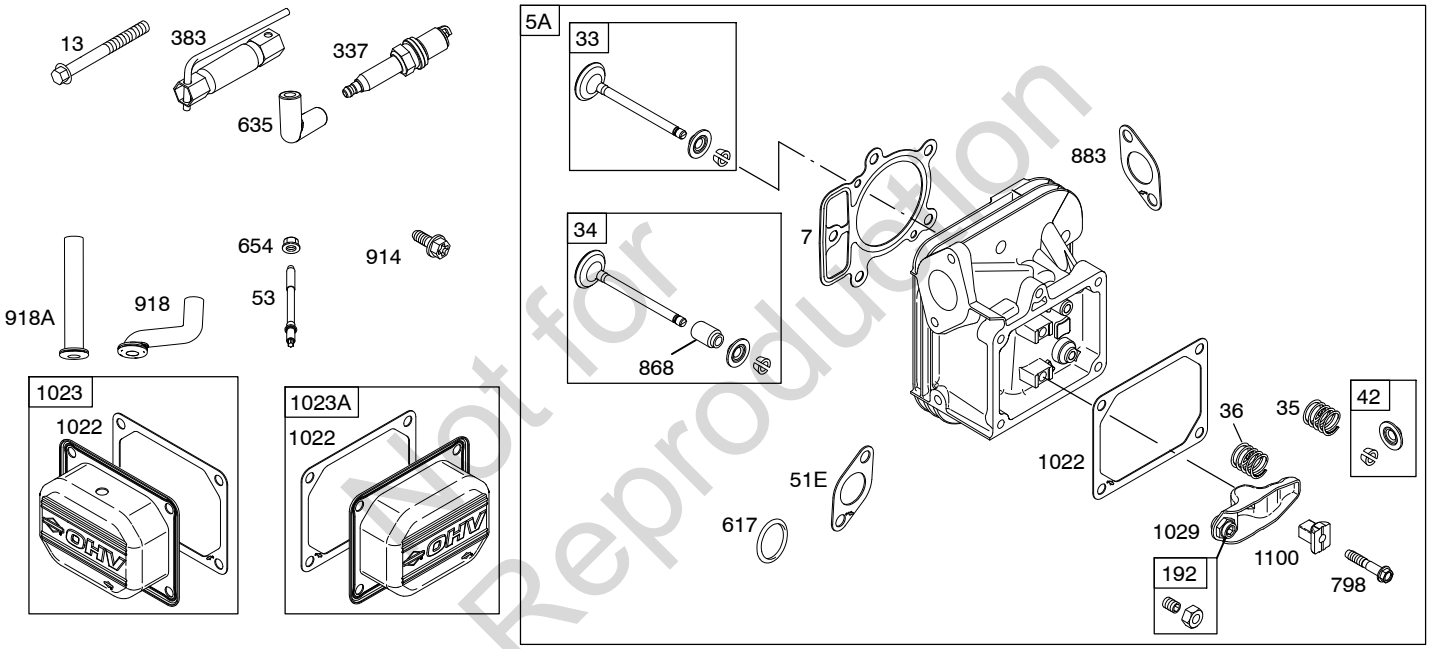

Not for Reproduction

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

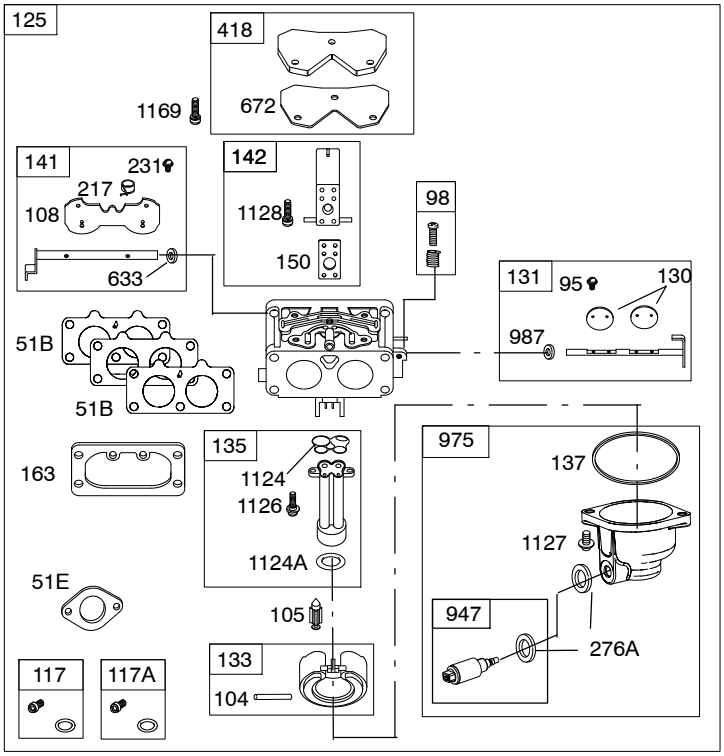

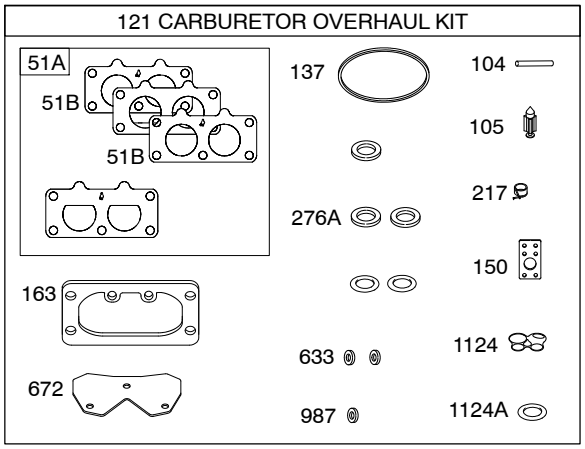



NOTE: Carburetor Illustrations Represents Several Carburetors. Parts Shown In The Service Box May Not Be Included In All Kits.

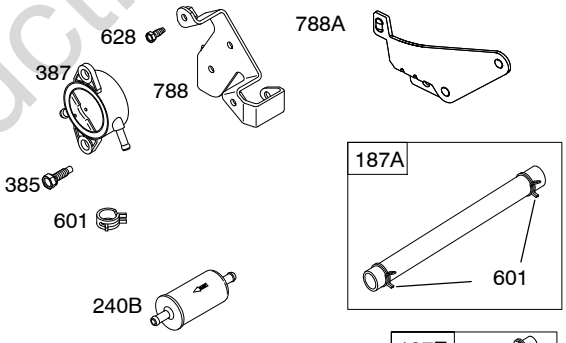

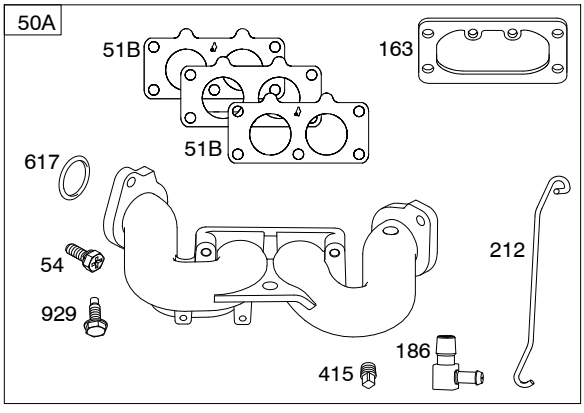

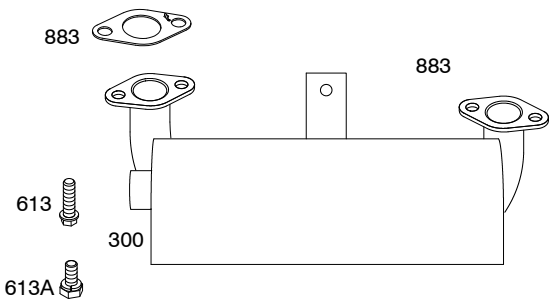

Not for Reproduction

44L700

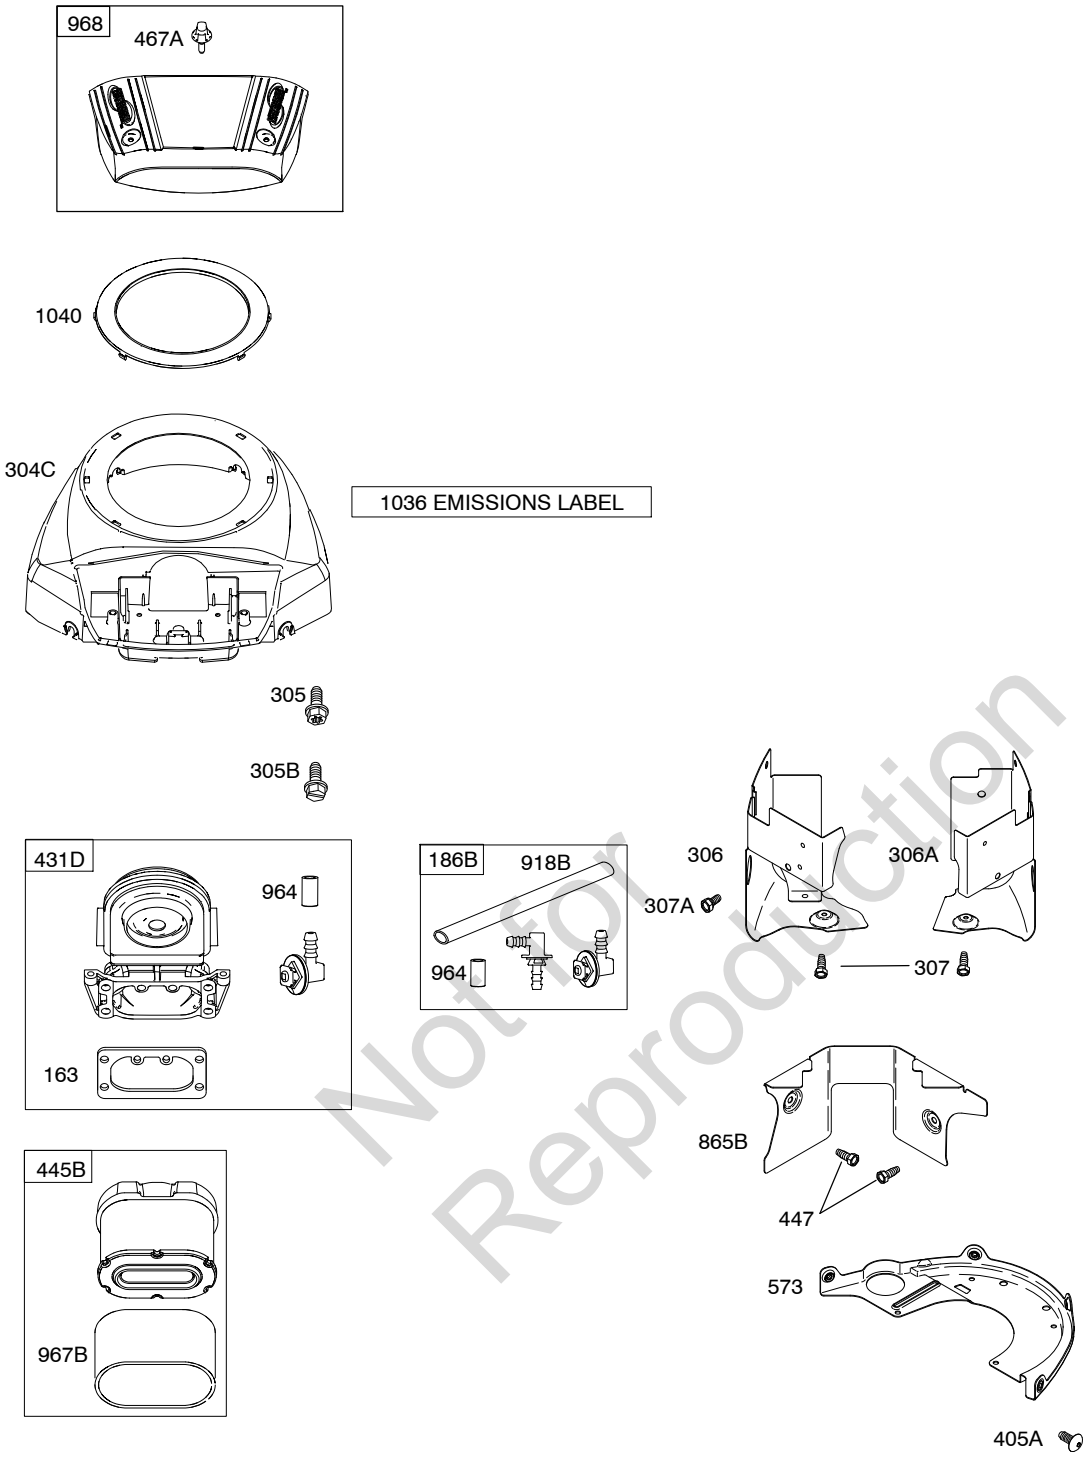

Not For Reproduction

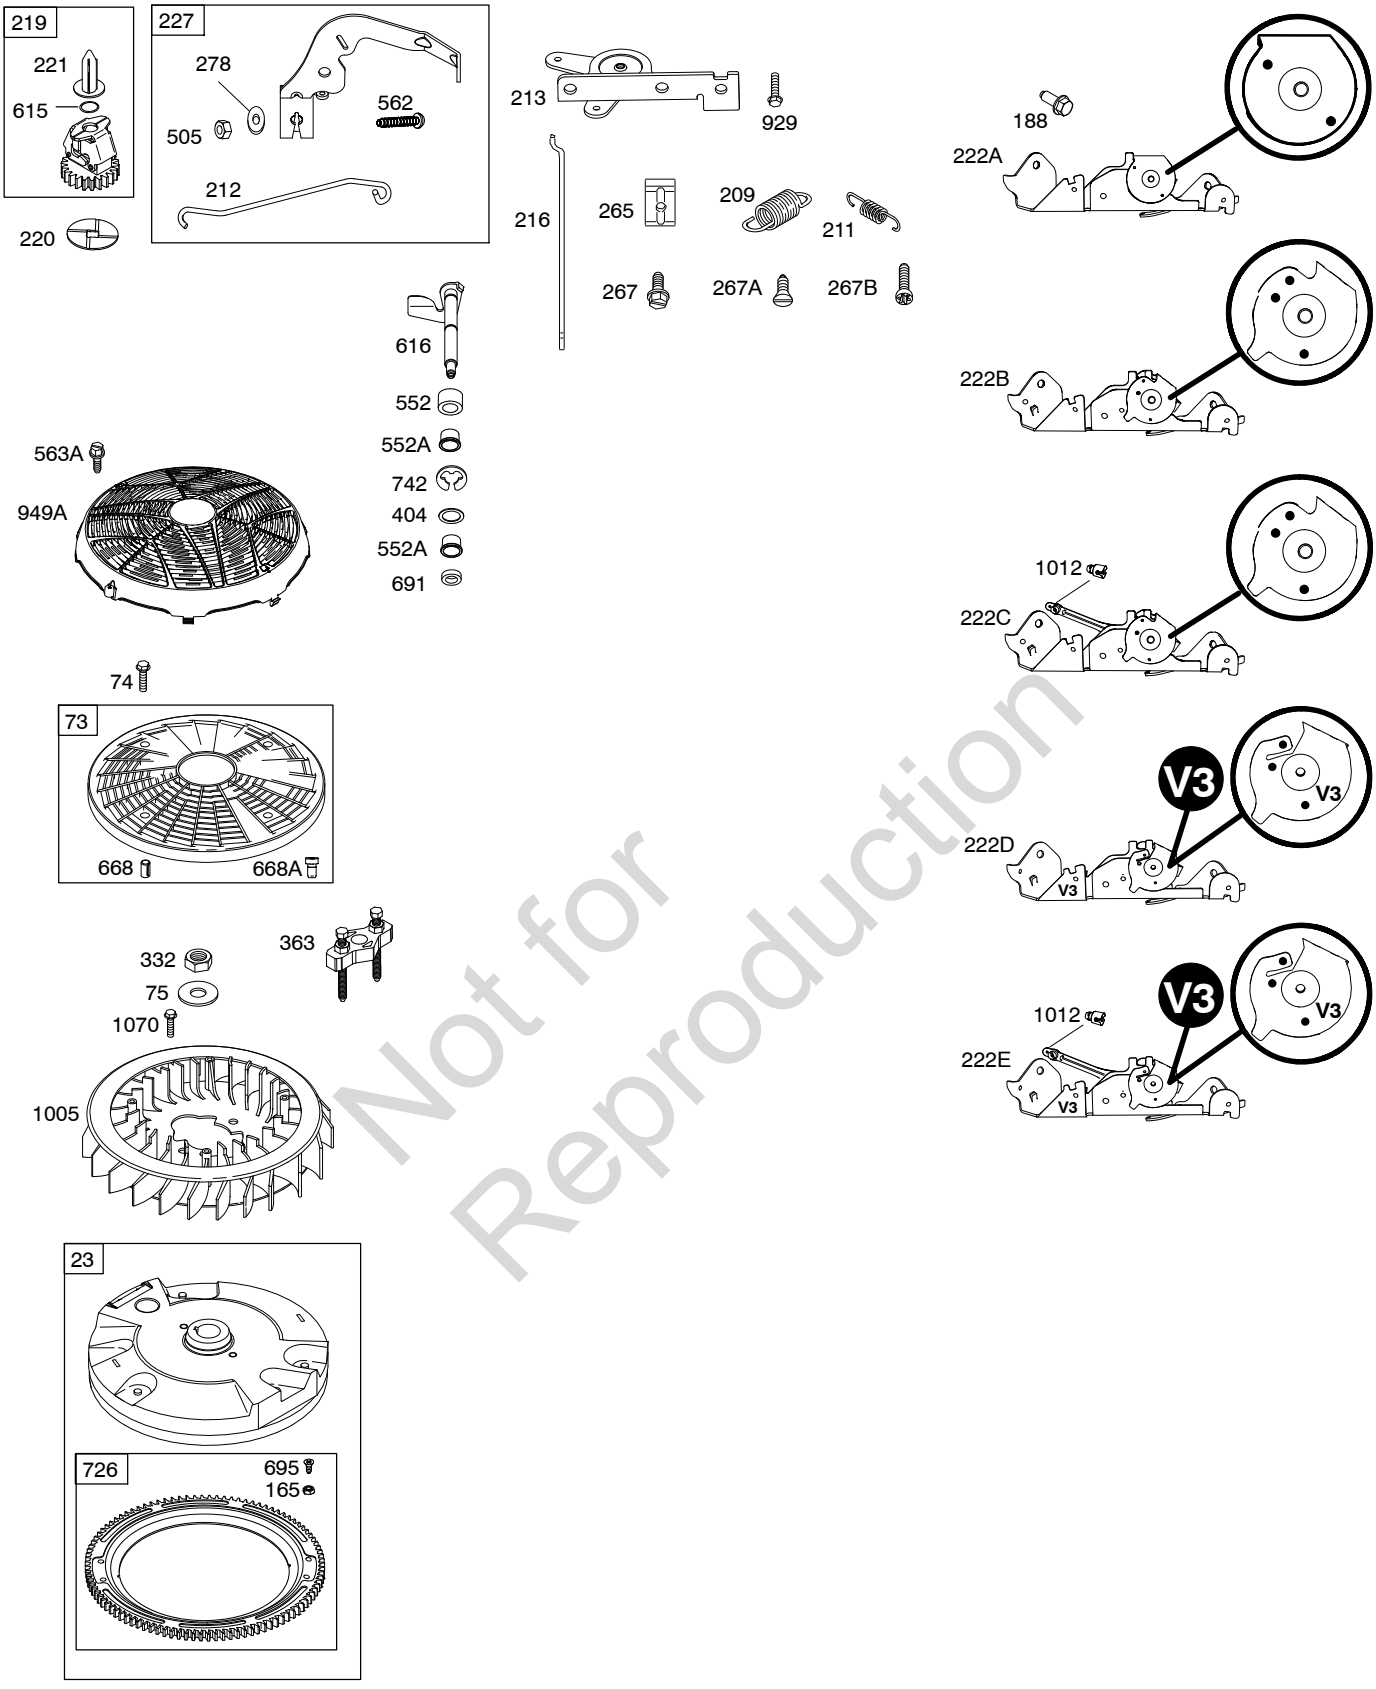

Not for Reproduction

44L700

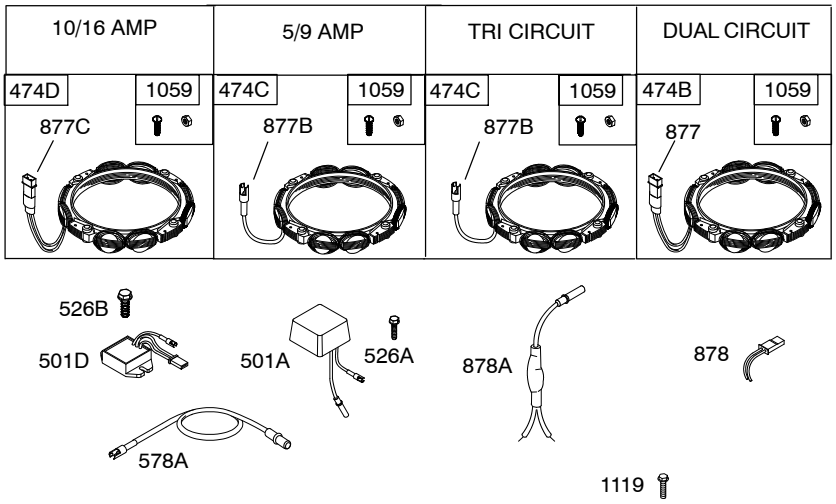

NOTE: *All stators use* 1119

NOTE: *The proper flywheel part number and/or the alternator magnet size will determine the alternator type or output. See repair instruction manual for additional information.*

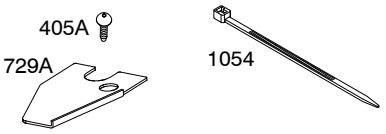



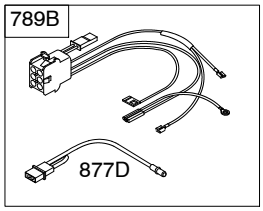

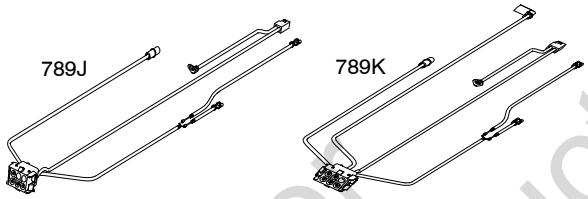

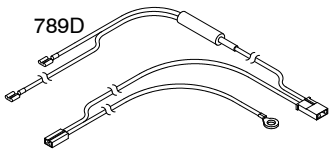

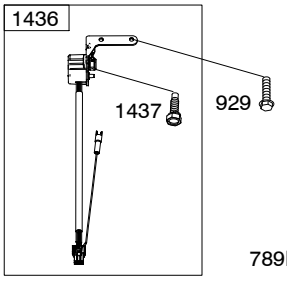

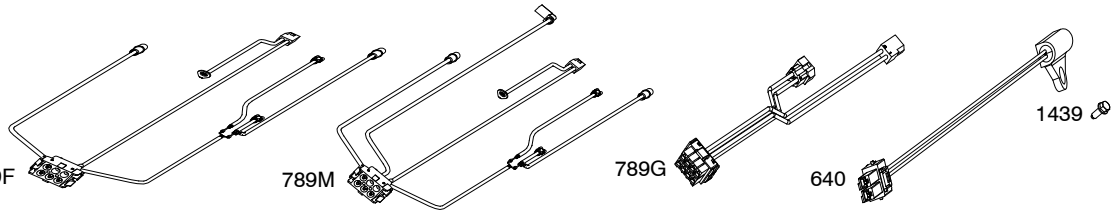

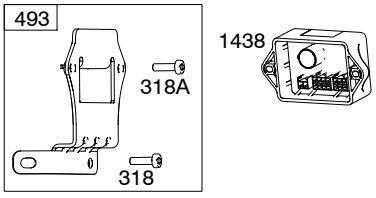

Not for Reproduction

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

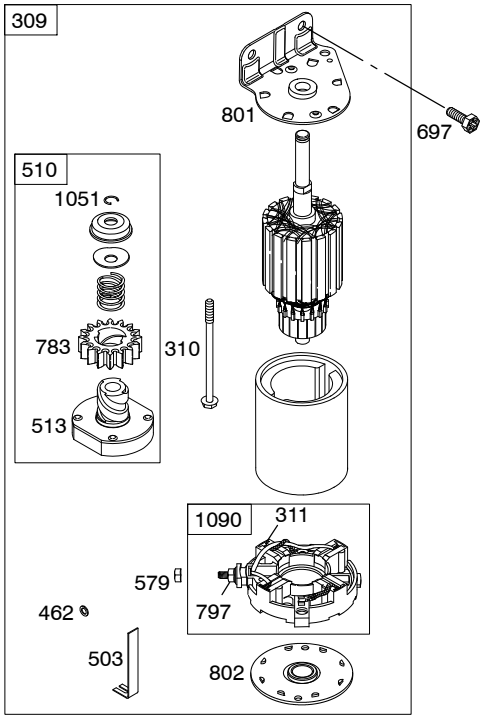

Not for Reproduction

44L700

REF. NO.	PART NO.	DESCRIPTION
1	793564	Cylinder Assembly
2	797673	Kit-Bushing/Seal (Magneto Side)
3	391086s	Seal-Oil (Magneto Side)
4B	796307	Sump-Engine
5	796231	Head-Cylinder (Cylinder 1)
5A	796232	Head-Cylinder (Cylinder 2)
7	693997	Gasket-Cylinder Head
8	792185	Breather Assembly
9	690937	Gasket-Breather
10	697551	Screw (Breather Assembly)
11	792184	Tube-Breather
12	697227	Gasket-Crankcase
13	791130	Screw (Cylinder Head) (Used Before Code Date 08070100).
		------ Note ------
		793988 Screw (Cylinder Head) (Used After Code Date 08063000).
15	691680	Plug-Oil Drain (Used Before Code Date 08071800).
15A	690946	Plug-Oil Drain (Used After Code Date 08071700).
16	796237	Crankshaft
		------ Note ------
		796257 Crankshaft Used on Type No(s). 0025, 0035, 0135.
		796256 Crankshaft Used on Type No(s). 0026, 0036, 0136.
20	795387	Seal-Oil (PTO Side)
22	694966	Screw (Crankcase Cover/Sump)
23	691053	Flywheel
		------ Note ------
		691054 Flywheel Used on Type No(s). 0100, 0118, 0130.
24	222698s	Key-Flywheel
25	792023	Piston Assembly (Standard)
		------ Note ------
		792072 Piston Assembly (.020" Oversize)
26	792026	Ring Set (Standard)
		------ Note ------
		792073 Ring Set (.020" Oversize)
27	690975	Lock-Piston Pin
28	690229	Pin-Piston
		------ Note ------
		696581 Pin-Piston Used on Type No(s). 0025, 0026, 0027, 0035, 0036, 0037, 0110, 0117, 0118, 0119, 0128, 0130, 0131, 0132, 0135, 0136, 0137, 0138, 0139, 0144, 0145, 0160, 0162, 0279, 0282, 0719, 0723, 0757, 0763, 0769, 1224, 2119, 2139, 3137.
29	796209	Rod-Connecting
32	690976	Screw (Connecting Rod)
33	697576	Valve-Exhaust
34	792200	Valve-Intake
35	694865	Spring-Valve (Intake)
36	694865	Spring-Valve (Exhaust)
42	499586	Keeper-Valve
45	690977	Tappet-Valve
46	790562	Camshaft
		------ Note ------
		796853 Camshaft Used on Type No(s). 0110, 0119, 0135, 0132, 0162, 0136, 0137, 0138, 0139, 0145, 0160, 0279, 0282, 0757, 0763, 0769, 2119, 2139, 3137.
50	695241	Manifold-Intake
51A	795123	Gasket-Intake
51B	690950	Gasket-Intake
51E	690949	Gasket-Intake
53	690951	Stud (Carburetor)
54	699816	Screw
73	494439	Screen-Rotating
74	698425	Screw (Rotating Screen)
75	691056	Washer (Flywheel)
95	690718	Screw (Throttle Valve)
98	699721	Kit-Idle Speed
104	694918	Pin-Float Hinge
105	797410	Valve-Float Needle
108	699723	Valve-Choke

Not for Reproduction

REF. NO.	PART NO.	DESCRIPTION
117	**792296**	Jet-Main (Standard) (Left)(Nikki) **------ Note ------** **842585** Jet-Main (Standard) (Left) (Nikki) Used on Type No(s). 0110, 0119, 0132, 0135, 0136, 0137, 0138, 0139, 0145, 0160, 0162, 0279, 0282, 0757, 0763, 0769, 2119, 2139, 3137.
117A	**842627**	Jet-Main (Standard) (Right)(Nikki) **------ Note ------** **842585** Jet-Main (Standard) (Right)(Nikki) Used on Type No(s). 0110, 0119, 0135, 0132, 0136, 0137, 0138, 0139, 0145, 0160, 0162, 0279, 0282, 0757, 0763, 0769, 2119, 2139, 3137.
118	**699457**	Jet-Main (High Altitude) (Left)(Nikki) **------ Note ------** **791502** Jet-Main (High Altitude) (Left)(Nikki) Used on Type No(s). 0110, 0119, 0135, 0132, 0136, 0137, 0138, 0139, 0145, 0160, 0162, 0279, 0282, 0757, 0763, 0769, 2119, 2139, 3137.
118A	**699733**	Jet-Main (High Altitude) (Right)(Nikki) **------ Note ------** **791502** Jet-Main (High Altitude) (Right)(Nikki) Used on Type No(s). 0110, 0119, 0135, 0132, 0136, 0137, 0138, 0139, 0145, 0160, 0162, 0279, 0282, 0757, 0763, 0769, 2119, 2139, 3137.
121	**797890**	Kit-Carburetor Overhaul
125	**792295**	Carburetor **------ Note ------** **796227** Carburetor Used on Type No(s). 0025, 0026, 0027, 0035, 0036, 0037, 0128, 0144, 0719, 0723, 1224. **796997** Carburetor Used on Type No(s). 0110, 0119, 0135, 0132, 0136, 0137, 0138, 0139, 0145, 0160, 0162, 0279, 0282, 0757, 0763, 0769, 2119, 2139, 3137. **796227** Carburetor (Used After Code Date 09010400). Used on Type No(s). 0117, 0118, 0130, 0131. **792295** Carburetor (Used Before Code Date 09010500). Used on Type No(s). 0117, 0118, 0130, 0131.
130	**690993**	Valve-Throttle
131	**499805**	Kit-Throttle Shaft
133	**699724**	Float-Carburetor
135	**699729**	Tube-Fuel Transfer
137	**690994**	Gasket-Float Bowl
141	**796228**	Kit-Choke Shaft
142	**699726**	Nozzle-Carburetor **------ Note ------** **796871** Nozzle- Carburetor Used on Type No(s). 0110, 0119, 0132, 0135, 0136, 0137, 0138, 0139, 0145, 0160, 0162, 0279, 0282, 0757, 0763, 0769, 2119, 2139, 3137.
146	**690979**	Key-Timing
150	**690995**	Gasket-Nozzle
163	**691001**	Gasket-Air Cleaner
165	**693148**	Nut (Ring Gear)
186	**795985**	Connector-Hose
186A	**796532**	Connector-Hose (Oil Drain)
186B	**799158**	Connector-Hose (EVAP)
187A	**791766**	Line-Fuel (Cut to Required Length)
187E	**791801**	Line-Fuel (Molded)
188	**697551**	Screw (Control Bracket)
192	**690083**	Adjuster-Rocker Arm

Not for Reproduction

44L700

REF. NO.	PART NO.	DESCRIPTION
209	**798921**	Spring-Governor Used on Type No(s). 0279, 0282. **------ Note ------** **793527** Spring-Governor Used on Type No(s). 0123. **793340** Spring-Governor Used on Type No(s). 0116. **793343** Spring-Governor Used on Type No(s). 0100. **795086** Spring-Governor Used on Type No(s). 0112. **796224** Spring-Governor Used on Type No(s). 0138, 0160. **799169** Spring-Governor Used on Type No(s). 0132. **799171** Spring-Governor Used on Type No(s). 0110, 2119, 2139. **799176** Spring-Governor Used on Type No(s). 3137. **798921** Spring-Governor (Used After Code Date 10072200). Used on Type No(s). 0115, 0144, 0719, 0757, 0763, 1038, 1224. **799171** Spring-Governor (Used After Code Date 10072200). Used on Type No(s). 0118, 0119, 0125, 0128, 0130, 0131, 0139, 0593, 0723, 0769.
		799258 Spring-Governor (Used After Code Date 10072200). Used on Type No(s). 0137. **799176** Spring-Governor (Used After Code Date 10072200). Used on Type No(s). 0025, 0026, 0027, 0035, 0036, 0037, 0117, 0135, 0136, 0145, 0162. **793340** Spring-Governor (Used Before Code Date 10072300). Used on Type No(s). 0025, 0115, 0118, 0130, 1038. **796828** Spring-Governor (Used Before Code Date 10072300). Used on Type No(s). 0119, 0135, 0136, 0137, 0139, 0145, 0162. **796658** Spring-Governor (Used Before Code Date 10072300). Used on Type No(s). 0757, 0763. **793343** Spring-Governor (Used Before Code Date 10072300). Used on Type No(s). 0026, 0027, 0117. **795086** Spring-Governor (Used Before Code Date 10072300). Used on Type No(s). 0125, 0131, 0593. **796927** Spring-Governor (Used Before Code Date 10072300). Used on Type No(s). 0035, 0036, 0037, 0128.
		796224 Spring-Governor (Used Before Code Date 10072300). Used on Type No(s). 0144, 0719, 0769, 1224. **796267** Spring-Governor (Used Before Code Date 10072300). Used on Type No(s). 0723. **795086** Spring-Governor (Used After Code Date 06081400). Used on Type No(s). 0111. **698071** Spring-Governor (Used Before Code Date 06081500). Used on Type No(s). 0111.

Not for Reproduction

REF. NO.	PART NO.	DESCRIPTION
211	**691019**	Spring-Governed Idle Used on Type No(s). 0025, 0026, 0027, 0100, 0110, 0111, 0112, 0115, 0116, 0117, 0118, 0123, 0125, 0130, 0131, 0132, 0160, 0279, 0282, 0593, 1038, 2119, 2139, 3137. **------ Note ------** **796225** Spring-Governed Idle Used on Type No(s). 0138. **691019** Spring-Governed Idle (Used After Code Date 10072200). Used on Type No(s). 0035, 0036, 0037, 0119, 0128, 0135, 0136, 0137, 0139, 0144, 0145, 0162, 0719, 0723, 0757, 0763, 0769, 1224. **796225** Spring-Governed Idle (Used Before Code Date 10072300). Used on Type No(s). 0035, 0036, 0037, 0119, 0128, 0135, 0136, 0137, 0139, 0144, 0145, 0162, 0719, 0723, 0757, 0763, 0769, 1224.
212	**695238**	Link-Throttle
213	**691021**	Bracket-Choke Control
216	**691022**	Link-Choke **------ Note ------** **796229** Link-Choke Used on Type No(s). 0035, 0036, 0037, 0110, 0119, 0128, 0135, 0136, 0137, 0138, 0144, 0160, 0279, 0282, 0719, 0723, 0757, 0763, 0769, 1224, 2119, 3137. **796879** Link-Choke Used on Type No(s). 0132, 0139, 0145, 2139.
217	**695409**	Spring-Choke Return
219	**793338**	Gear-Governor
220	**690412**	Washer (Governor Gear)
221	**841026**	Cup-Governor
222A	**698761**	Bracket-Control (Manual Choke) Used on Type No(s). 0025, 0026, 0027, 0100, 0111, 0112, 0115, 0116, 0117, 0118, 0123, 0125, 0130, 0131, 0593, 1038.
222B	**796630**	Bracket-Control (Manual Choke) (Used Before Code Date 10072300). Used on Type No(s). 0139, 0145, 0162.
222C	**796226**	Bracket-Control (Choke-A-Matic) Used on Type No(s). 0138, 0160. **------ Note ------** **796226** Bracket-Control (Choke-A-Matic) (Used Before Code Date 10072300). Used on Type No(s). 0035, 0036, 0037, 0119, 0128, 0135, 0136, 0137, 0144, 0719, 0723, 0757, 0763, 0769, 1224.
222D	**798916**	Bracket-Control (V3 Manual Choke) Used on Type No(s). 0132, 2139. **------ Note ------** **798916** Bracket-Control (V3 Manual Choke) (Used After Code Date 10072200). Used on Type No(s). 0139, 0145, 0162.
222E	**798915**	Bracket-Control (V3 Choke-A-Matic) Used on Type No(s). 0110, 0279, 0282, 2119, 3137. **------ Note ------** **798915** Bracket-Control (V3 Choke-A-Matic) (Used After Code Date 10072200). Used on Type No(s). 0035, 0036, 0037, 0119, 0128, 0135, 0136, 0137, 0144, 0719, 0723, 0757, 0763, 0769, 1224.
227	**798856**	Lever-Governor Control
231	**690718**	Screw (Choke Valve)
239	**697049**	Switch-Oil Pressure **------ Note ------** **792028** Switch-Oil Pressure Used on Type No(s). 0117, 0145, 0162, 0593, 0719, 0723, 0757, 0763, 0769.
240B	**695666**	Filter-Fuel
250	**690957**	Retainer-Breather
252	**794389**	Collector-Oil
265	**691024**	Clamp-Casing
267	**691044**	Screw (Casing Clamp)
267A	**695134**	Screw (Casing Clamp)
267B	**792629**	Screw (Casing Clamp)
276A	**695410**	Washer-Sealing (Aluminum Float Bowl)
278	**792651**	Washer (Governor Control Lever)
287	**697820**	Screw (Dipstick Tube)

Not for Reproduction

44L700

REF. NO.	PART NO.	DESCRIPTION
300	**696226**	Muffler
304C	**797407**	Housing-Blower (Black)
		------ Note ------
		798579 Housing-Blower (Grey) Used on Type No(s). 1038, 1224.
305	**691005**	Screw (Blower Housing)
305B	**790690**	Screw (Blower Housing to Intake Elbow)
306	**796852**	Shield-Cylinder (Cylinder 1)
306A	**798855**	Shield-Cylinder (Cylinder 2) (Used After Code Date 10052300).
		------ Note ------
		796541 Shield-Cylinder (Cylinder 2) (Used Before Code Date 10052400 and After Code Date 08080300).
		793205 Shield-Cylinder (Cylinder 2) (Used Before Code Date 08080400).
307	**691003**	Screw (Cylinder Shield)
307A	**697551**	Screw (Cylinder Shield)
309	**795121**	Motor-Starter
		------ Note ------
		497595 Motor-Starter Used on Type No(s). 0125, 0593, 0719, 0723, 0757, 0763, 1224.
310	**691263**	Screw (Starter Motor)
		------ Note ------
		690323 Screw (Starter Motor) Used on Type No(s). 0125, 0593, 0719, 0723, 0757, 0763, 1224.

REF. NO.	PART NO.	DESCRIPTION
311	**497608**	Brush Set
318	**691127**	Screw (Mounting Bracket)
318A	**792629**	Screw (Electronic Choke Module To Bracket)
332	**691059**	Nut (Flywheel)
333	**691060**	Armature-Magneto
334	**691061**	Screw (Magneto Armature)
337	**491055s**	Plug-Spark
		------ Note ------
		792015 Plug-Spark Used on Type No(s). 0279, 0282, 0769.
		691043 Plug-Spark Used on Type No(s). 0110, 0118, 0119, 0128, 0130, 0131, 0132, 0139, 0757, 2119, 2139.
		696202 Plug-Spark Used on Type No(s). 0111, 1224.
358A	**694012**	Gasket Set-Engine
363	**19203**	Puller-Flywheel
383	**19576S**	Wrench-Spark Plug
385	**797409**	Screw (Fuel Pump Mounted On Blower Housing)
		------ Note ------
		697551 Screw (Fuel Pump Mounted On Fuel Pump Bracket)
387	**808656**	Pump-Fuel
404	**690442**	Washer (Governor Crank)
405A	**697820**	Screw (Back Plate)
415	**794903**	Plug (Engine Sump)
418	**795912**	Plate-Carburetor
431D	**798860**	Elbow-Intake (EVAP) (Used After Code Date 10053100).
		------ Note ------
		792297 Elbow-Intake (Used Before Code Date 10060100).

REF. NO.	PART NO.	DESCRIPTION
445B	**792105**	Filter-Air Cleaner Cartridge
447	**691003**	Screw (Air Guide Cover)
462	**691261**	Washer (Starter Cable)
467A	**790697**	Knob-Air Cleaner (1" Long)
474B	**696459**	Alternator (Dual Circuit)
474C	**696457**	Alternator (5/9 Amp. Regulated Or Tri-Circuit)
474D	**696458**	Alternator (10-16 Amp. Circuit)
493	**797176**	Bracket-Electronic Choke Module
501A	**794360**	Regulator (5/9 Amp.)
501D	**797375**	Regulator (10-16 Amp.)
503	**691532**	Strap-Starter
505	**691029**	Nut (Governor Control Lever)
510	**696541**	Drive-Starter
512	**796530**	Hose-Oil Drain
513	**692024**	Clutch-Drive
523	**691036**	Dipstick
524	**691032**	Seal-Dipstick Tube
525	**691037**	Tube-Dipstick
526A	**691129**	Screw (Regulator)
526B	**697551**	Screw (Regulator)

Not for Reproduction

REF. NO.	PART NO.	DESCRIPTION
552	**690552**	Bushing-Governor Crank
		------ Note ------
		796638 Bushing-Governor Crank Used on Type No(s). 0025, 0026, 0027, 0035, 0036, 0037, 0110, 0117, 0118, 0119, 0128, 0130, 0131, 0132, 0135, 0136, 0137, 0138, 0139, 0144, 0145, 0160, 0162, 0279, 0282, 0719, 0723, 0757, 0763, 0769, 1224, 2119, 2139, 3137.
552A	**690553**	Bushing-Governor Crank
562	**690311**	Bolt (Governor Control Lever)
563A	**799359**	Screw (Debris Guard)
573	**790444**	Plate-Back
578A	**691208**	Wire Assembly (18" Long-Used On Cylinder #2 Mounted Regulator)
		------ Note ------
		797463 Wire Assembly (14" Long-Used On Cylinder #1 Mounted Regulator)
579	**691029**	Nut (Starter Cable)
601	**791850**	Clamp-Hose (Green)
		------ Note ------
		691038 Clamp-Hose (Black)
613	**690341**	Screw (Muffler)
613A	**690297**	Screw (Muffler)
615	**698290**	Retainer-Governor Shaft
616	**691045**	Crank-Governor
617	**697891**	Seal-O Ring (Intake Manifold)
628	**697551**	Screw (Fuel Pump Bracket)
633	**690998**	Seal-Choke/Throttle Shaft
		------ Note ------
		699813 Seal-Choke/Throttle Shaft Used on Type No(s). 0025, 0026, 0027, 0035, 0036, 0037, 0110, 0119, 0128, 0132, 0135, 0136, 0137, 0138, 0139, 0144, 0145, 0160, 0162, 0279, 0282, 0719, 0723, 0757, 0763, 0769, 1224, 2119, 2139, 3137.
		699813 Seal-Choke/Throttle Shaft (Used After Code Date 09010400). Used on Type No(s). 0117, 0118, 0130, 0131.
		690988 Seal-Choke/Throttle Shaft (Used Before Code Date 09010500). Used on Type No(s). 0117, 0118, 0130, 0131.
635	**692076**	Boot-Spark Plug
640	**796913**	Wire-Thermistor
654	**690958**	Nut (Carburetor)
668	**691500**	Spacer
668A	**691215**	Spacer
672	**690234**	Gasket-Carburetor Plate
691	**790574**	Seal-Governor Shaft
695	**693149**	Screw (Ring Gear)
697	**791680**	Screw (Drive Cap)
703	**691010**	Clip
718	**690959**	Pin-Locating
726	**499612**	Gear-Ring
729	**694123**	Clip-Wire
729A	**797454**	Clip-Wire
741	**690980**	Gear-Timing
742	**690328**	Retainer-E Ring
750	**696999**	Screw (Oil Pump Cover) (Used Before Code Date 08071800).
750A	**796208**	Screw (Oil Pump Cover) (Used After Code Date 08071700).
783	**695708**	Gear-Pinion
788	**691039**	Bracket-Fuel Pump (Used Before Code Date 06072800).
788A	**793145**	Bracket-Fuel Pump (Used After Code Date 06072700).
789B	**698330**	Harness-Wiring
789D	**691220**	Harness-Wiring
789F	**796860**	Harness-Wiring
789G	**796914**	Harness-Wiring
789J	**797424**	Harness-Wiring
789K	**797460**	Harness-Wiring
789M	**797492**	Harness-Wiring
797	**693167**	Nut (Brush Retainer)
798	**697890**	Screw (Rocker Arm)
801	**691283**	Cap-Drive
802	**691286**	Cap-End
842	**691031**	Seal-O Ring (Dipstick Tube)
847	**499602**	Dipstick/Tube Assembly
850	**100106**	Sealant-Liquid
851	**493880s**	Terminal-Spark Plug
865B	**792286**	Cover-Air Guide (Valley)

Not for Reproduction

44L700

REF. NO.	PART NO.	DESCRIPTION
868	**690968**	Seal-Valve
877	**393456**	Wire/Connector-Alternator
877B	**393537**	Wire/Connector-Alternator
877C	**399916**	Wire/Connector-Alternator
877D	**790544**	Wire/Connector-Alternator
878	**398661**	Harness-Alternator
878A	**691955**	Harness-Alternator
883	**690970**	Gasket-Exhaust
914	**691127**	Screw (Rocker Cover)
918	**793147**	Hose-Vacuum
918A	**797408**	Hose-Vacuum (Length 3.2 Inches)
		------ Note ------
		694000 Hose-Vacuum (Length 1.6 Inches)
918B	**799160**	Hose-Vacuum (Length 9.4 Inches)
929	**695239**	Screw (Choke Control Bracket)
943	**690589**	Seal-O Ring (Oil Pump Cover) (Used Before Code Date 08071800).
943A	**796222**	Seal-O Ring (Oil Pump Cover) (Used After Code Date 08071700).
947	**798779**	Solenoid-Fuel (Used On Double Barrel Aluminum Bowl Carburetors)
949A	**798767**	Guard-Debris Screen
964	**799159**	Cap-Connector
965	**499613**	Cover-Oil Pump (Used Before Code Date 08071800).
965A	**796221**	Cover-Oil Pump (Used After Code Date 08071700).
967B	**792303**	Filter-Pre Cleaner
968	**795120**	Cover-Air Cleaner (Black)
		------ Note ------
		798584 Housing-Blower (Grey) Used on Type No(s). 1038, 1224.

REF. NO.	PART NO.	DESCRIPTION
975	**798778**	Bowl-Float/Solenoid
977	**792456**	Gasket Set-Carburetor
987	**691000**	Seal-Throttle Shaft
1005	**791236**	Fan-Flywheel
1012	**797926**	Retainer-Link
1013	**690954**	Nipple-Oil Filter
1017	**690770**	Screen-Oil Pump (Used Before Code Date 08071800).
1017A	**796214**	Screen-Oil Pump (Used After Code Date 08071700).
1022	**690971**	Gasket-Rocker Cover
1023	**793146**	Cover-Rocker (Cylinder 1) (Used After Code Date 06072700).
		------ Note ------
		499599 Cover-Rocker (Cylinder 1) (Used Before Code Date 06072800).
1023A	**499600**	Cover-Rocker (Cylinder 2)
1024	**794644**	Pump-Oil (Used Before Code Date 08071800).
1024A	**796220**	Pump-Oil (Used After Code Date 08071700).
1026	**690981**	Rod-Push (Steel)
1026A	**690982**	Rod-Push (Aluminum)
1027	**492932S**	Filter-Oil (Standard) (Black)
		------ Note ------
		696854 Filter-Oil (Premium) (Yellow)
		798576 Filter-Oil (Premium) (Orange)
1029	**690972**	Arm-Rocker (Includes Reference 192)
1035	**691042**	Shaft-Pump
1036		Label-Emissions (Available from a Briggs and Stratton Authorized Dealer)

REF. NO.	PART NO.	DESCRIPTION
1040	**791237**	Plate-Trim (Black)
		------ Note ------
		798585 Plate-Trim (Orange)
1051	**691265**	Ring-Retaining
1054	**280275**	Tie-Cable
1058	**278776**	Operator's Manual
1059	**698516**	Kit-Screw/Washer
1070	**791680**	Screw (Flywheel Fan)
1090	**691293**	Retainer-Brush
1095	**694013**	Gasket Set-Valve
1100	**791959**	Pivot-Rocker Arm
1119	**691183**	Screw (Alternator)
1124	**690988**	Seal-O Ring (Fuel Transfer Tube)
1124A	**841653**	Seal-O Ring (Fuel Transfer Tube)
1126	**690991**	Screw (Fuel Transfer Tube)
1127	**695407**	Screw (Float Bowl)
1128	**690990**	Screw (Carburetor Nozzle)
1169	**690990**	Screw (Carburetor Cover Plate)
1319	**794467**	Label-Warning
1330	**273521**	Repair Manual
1436	**796918**	Bracket-Stepper Motor
1437	**699891**	Screw (Stepper/Bracket Motor)
1438	**796350S**	Module-Electronic Choke Used on Type No(s). 0132, 0139, 2139.
		------ Note ------
		796351S Module-Electronic Choke Used on Type No(s). 0145.
1439	**690365**	Screw (Thermistor Wire Assy)

Not for Reproduction

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

Not for
Reproduction

Not for
Reproduction

Not for
Reproduction

Not for
Reproduction

BRIGGS & STRATTON